



CONTACT US FOR SUPPORT: 631-862-1339

NEC DSX

To change the time and date, you must be at ext 300

Press:

#83

Enter the time in 24-hour format HH:MM:SS

Hold

Speaker to exit